

GENERAL USE



Pensolv L805 was developed as a replacement for 1,1,1-trichloroethane and exhibits cleaning performance at the same level as 1,1,1. **Pensolv L805** dissolves grease, fingerprints, oils and flux typically removed by solvent cleaners.

FEATURES AND BENEFITS

- Effective at low concentrations
- Safe on all metals
- Hard water tolerant
- Excellent rinsability
- Caustic free
- Economical to use
- One product for all metals
- Less hazardous to use than caustic products
- Bright soil-free surface after rinsing

DIRECTIONS FOR USE

Use procedures

- Immersion** Immerse parts for several minutes, agitate as needed, remove parts and drain solvent back into tank. Air dry.
- Spray** Spray on, brush as needed, wipe off.

PENSOLV L805

CFC-FREE PRECISION SOLVENT CLEANER

PHYSICAL PROPERTIES

Appearance	Clear liquid
Odor	Mild
pH	12.0-12.5
Freezing Point	About 25°F
Boiling Point	About 212°F
Flash Point (TCC)	Not applicable
Relative Density	1.13
Auto-Ignition Temperature	Not applicable
Water Solubility	Complete
Viscosity	Less than 5 CP at room temperature

INCOMPATIBILITY
Strong acids.

WAREHOUSING PRECAUTIONS
Store locked up. Keep container tightly closed when not in use. Do not store in direct sunlight. Avoid storing above 120°F (49°C).

APPROVALS
A1

AVAILABLE SIZES
5 gallon Pail
55 gallon Drum
11 oz. (aerosol) (12 case)

FIRST AID MEASURES


If in eyes: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. Immediately call a local Poison Control Center, doctor, physician or other competent medical authority for medical advice. Penetone recommends that after any eye exposure a physician be seen immediately.

If swallowed: Rinse mouth. DO NOT INDUCE VOMITING. Immediately call a poison center, doctor, physician or other competent medical authority for medical advice.

If inhaled: Remove person to fresh air and keep comfortable for breathing. Immediately call a local Poison Control Center, physician, or other competent medical authority for medical advice.

If on skin (or hair): Take off immediately all contaminated clothing. Rinse skin with water or shower. A mild soap may be used to wash skin. Wash contaminated clothing before reuse. Immediately call a local Poison Control Center, doctor, physician or other competent medical authority for medical advice.

PERSONAL PROTECTION Security equipment

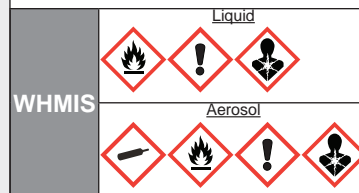

IMPORTANT: Before using **PENSOLV L805** always be sure to read and follow precautions and directions for use appearing on the product container label and on the safety data sheet (S.D.S).



CARLSTADT
700 Gotham Parkway
Carlstadt, NJ 07072
Tel.: 201-567-3000
Toll free: 1-800-631-1652

MONTREAL
10,900 Secant Street
Anjou, QC H1J 1S5
Tel.: 514-355-4660
Toll free: 1-800-361-8927

EDMONTON
11411-160 Street
Edmonton, Alberta T5M 3T7
Tel.: 780-454-3919
Toll free: 1-866-454-3919

United States
www.penetone.com

Canada
www.westpenetone.com