

## GENERAL USE



**Pensolv L805** was developed as a replacement for 1,1,1-trichloroethane and exhibits cleaning performance at the same level as 1,1,1. **Pensolv L805** dissolves grease, fingerprints, oils and flux typically removed by solvent cleaners.

## FEATURES AND BENEFITS

- Effective at low concentrations
- Safe on all metals
- Hard water tolerant
- Excellent rinsability
- Caustic free
- Economical to use
- One product for all metals
- Less hazardous to use than caustic products
- Bright soil-free surface after rinsing

## DIRECTIONS FOR USE

### Use procedures

- Immersion** Immerse parts for several minutes, agitate as needed, remove parts and drain solvent back into tank. Air dry.
- Spray** Spray on, brush as needed, wipe off.

# PENSOLV L805

## CFC-FREE PRECISION SOLVENT CLEANER

### PHYSICAL PROPERTIES

Appearance	Clear liquid
Odor	Mild
pH	12.0-12.5
Freezing Point	About 25°F
Boiling Point	About 212°F
Flash Point (TCC)	Not applicable
Relative Density	1.13
Auto-Ignition Temperature	Not applicable
Water Solubility	Complete
Viscosity	Less than 5 CP at room temperature

INCOMPATIBILITY
Strong acids.

WAREHOUSING PRECAUTIONS
Store locked up. Keep container tightly closed when not in use. Do not store in direct sunlight. Avoid storing above 120°F (49°C).

APPROVALS
A1

AVAILABLE SIZES
5 gallon Pail
55 gallon Drum
11 oz. (aerosol) (12 case)

### FIRST AID MEASURES


**If in eyes:** Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. Immediately call a local Poison Control Center, doctor, physician or other competent medical authority for medical advice. Penetone recommends that after any eye exposure a physician be seen immediately.

**If swallowed:** Rinse mouth. DO NOT INDUCE VOMITING. Immediately call a poison center, doctor, physician or other competent medical authority for medical advice.

**If inhaled:** Remove person to fresh air and keep comfortable for breathing. Immediately call a local Poison Control Center, physician, or other competent medical authority for medical advice.

**If on skin (or hair):** Take off immediately all contaminated clothing. Rinse skin with water or shower. A mild soap may be used to wash skin. Wash contaminated clothing before reuse. Immediately call a local Poison Control Center, doctor, physician or other competent medical authority for medical advice.

### PERSONAL PROTECTION Security equipment

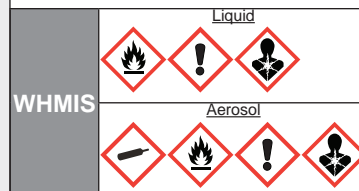

**IMPORTANT:** Before using **PENSOLV L805** always be sure to read and follow precautions and directions for use appearing on the product container label and on the safety data sheet (S.D.S).



#### CLIFTON

125 Kingsland Avenue  
Clifton, NJ 07014  
Tel.: 201-567-3000  
Toll free: 1-800-631-1652

#### MONTREAL

10,900 Secant Street  
Anjou, QC H1J 1S5  
Tel.: 514-355-4660  
Toll free: 1-800-361-8927

#### EDMONTON

11411-160 Street  
Edmonton, Alberta T5M 3T7  
Tel.: 780-454-3919  
Toll free: 1-866-454-3919

United States  
[www.penetone.com](http://www.penetone.com)

Canada  
[www.westpenetone.com](http://www.westpenetone.com)